


SALTER

SALTER COOK BLUETOOTH RECIPE THERMOMETER

Instructions and Guarantee



Register your product today at
www.homedicsgroup.com/register

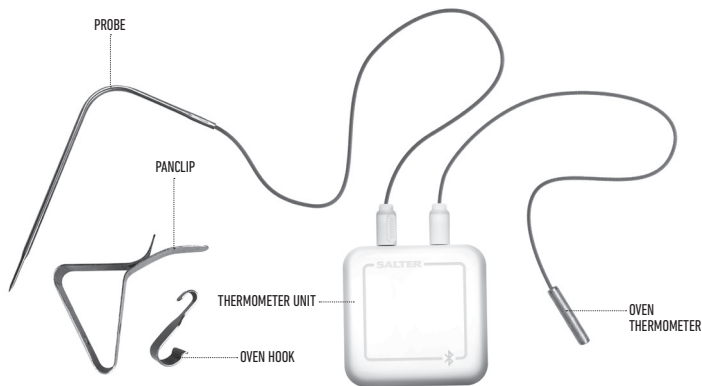

SALTER COOK


Streamline your culinary experience with Salter Cook. The free Salter Cook app allows you to create your own personal cookbook with interactive weights, times and temperatures.

Capture recipes from the most popular recipe websites at the click of a button or manually enter your own.

Easily follow recipes stages/ingredients lists with strikethrough, adjust portions, add categories, upload your own photos, share recipes with friends and much more!

Set multiple timers and name them to avoid confusion. Connect to the Salter Bluetooth Cook Scale & Thermometer to set targets direct from the recipe and see measurements on your smartphone or tablet. And remember if you're stuck for inspiration whilst out shopping all your favourite recipes and ingredients lists are available at your fingertips in the Salter Cook app.

BATTERY 1 x CR2032. Ensure +/- terminals are the correct way round.

CONNECT Press  button on the display unit. The Bluetooth light will light.

Make sure your devices Bluetooth is turned on and open up the Salter Cook App (available for download from the App & Play stores).

The app & thermometer will automatically connect, the Bluetooth light will start flashing once successfully connected to a device.

Note: Your thermometer will automatically connect to the nearest device that has the Salter Cook App open. If the thermometer is not automatically connecting to your preferred device make sure that the Salter Cook App is not open on any other nearby devices.

USING YOUR THERMOMETER Press  button to switch on. Insert the jack end of the thermometer into one of the ports

on the top of the product. For meats, confectionary & frying use the probe thermometer.

For oven temperature use the oven thermometer.


The thermometer is now ready to use and the Salter Cook App will display the measured temperatures.

SETTING TARGETS To set a target temperature open the Salter Cook App and either select a temperature in a recipe or click the target icon when in thermometer view. Then follow the on screen instructions.


The LED next to the port will flash to indicate that the target has been set.

When the thermometer reaches its target temperature the LED next to the port will light & the alarm will sound for one minute.

Press  on the display unit to silence the alarm.

The target can be cleared by selecting the  icon.

Note: To preserve battery life your thermometer will

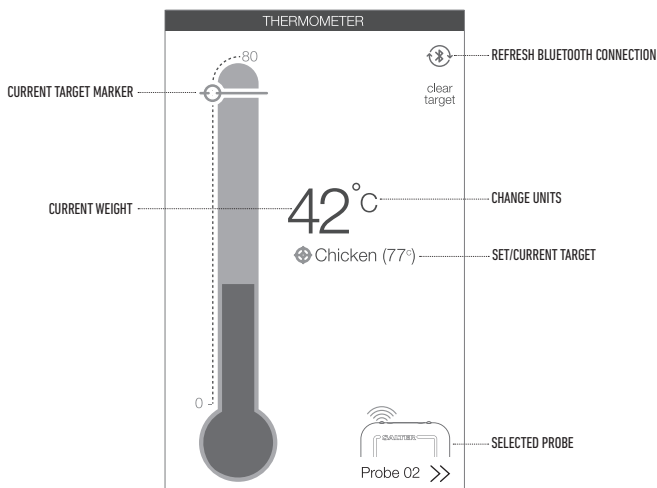

automatically turn off after 3 hours. For slow cooking/roasting put your probe & thermometer in position at the start then turn on and set your target 2 hours before the estimated finish time. Set a timer to remind you.

For oven temperature The oven thermometer clip can be used to hook the oven thermometer onto a wire rack. Position the thermometer as central as possible, away from the sides of the oven. Carefully close the oven door onto the cord and position the display unit near the oven with the cord out of the reach of children.

For meats, fish and poultry Insert the tip of the probe into the centre (thickest part) of the meat/ food. For whole poultry remove trussing and then insert into the thickest part of the thigh. Ensure the probe is not in contact with bone, fat or gristle as this will affect the validity of the reading. The food can be cooked with the probe in place and the thermometer will monitor the temperature continually until it reaches its target. Always keep the display unit away from direct heat.

When using the probe in an oven, carefully close the oven door onto the cord and position the display unit near the oven with the cord out of the reach of children.

IMPORTANT:

Do not use in oven temperatures above 250°C/480°F. Keep the cord end of the probe clear of the oven walls and heating elements. Never place the display unit inside the oven or grill or on direct heat. Never use the probe to lift or turn food items.

For confectionary The pan clip can be used to hold the probe in place in your confectionary (jam, toffee, caramel etc). Position the tip of the probe in the liquid, away from the sides and bottom of the pan. Position the display unit to the side of the cooker away from the direct heat, ensuring that the cord is out of the reach of children. Take care if stirring that you don't dislodge the probe.

For deep frying Use the probe as for confectionary (see above), placing the tip of the probe in the oil. For safety reasons, it is recommended that the probe is removed from the oil once a stable temperature has been reached, before adding food.

AFTER USE

- Always clean the probe thoroughly between each use. (See cleaning instructions below)
- To maximise battery life press and hold the button to switch off after use.


CLEANING


We recommend that the thermometer probe is sterilised before each use e.g. insert the stem of the probe only in boiling water for a few minutes.

- Clean the thermometer body with a slightly damp cloth.
- DO NOT immerse the display unit in water or use chemical/abrasive cleaning agents.
- All plastic parts should be cleaned immediately after contact with fats, spices, vinegar

CARE & PRECAUTIONS

- Always remove flat batteries immediately.
- We recommend changing the battery after 1 to 2 years, to prevent batteries corroding in the product.
- Always wear a heat resistant glove when handling the thermometer probe & cord. **WARNING HOT SURFACE!**
- Do not immerse the thermometer body in liquid, or splash any liquid onto this part.
- The thermometer is NOT suitable for use in a microwave oven.
- DO NOT place display unit inside oven or grill.
- Probe & cord cannot exceed temperatures of 250°C/480°F.

 **WEEE EXPLANATION** This marking indicates that this product should not be disposed with other household wastes throughout the EU. To prevent possible harm to the environment or human health from uncontrolled waste disposal, recycle it responsibly to promote the sustainable reuse of material resources. To return your used device, please use the return and collection systems or contact the retailer where the product was purchased. They can take this product for environmental safe recycling.

 **BATTERY DIRECTIVE** This symbol indicates that batteries must not be disposed of in the domestic waste as they contain substances which can be damaging to the environment and health. Please dispose of batteries in designated collection points.

GUARANTEE This product is intended for domestic use only. Salter will repair or replace the product, or any part of

this product, (excluding batteries) free of charge if within 2 years of the date of purchase, it can be shown to have failed through defective workmanship or materials. This guarantee covers working parts that affect the function of the product. It does not cover cosmetic deterioration caused by fair wear and tear or damage caused by accident or misuse. Salter shall not be responsible for any type of incidental, consequential or special damages. Opening or taking apart the product or its components will void the guarantee. Claims under guarantee must be supported by proof of purchase and be returned carriage paid to Salter (or local Salter appointed agent if outside the UK). Care should be taken in packing the product so that it is not damaged while in transit. This undertaking is in addition to a consumer's statutory rights and does not affect those rights in any way. For UK Sales and Service contact HoMedics Group Ltd, HoMedics House, Somerhill Business Park, Five Oak Green Road, Tonbridge, Kent TN11 0GP, UK. Helpline Tel No: (01732) 360783. Outside the UK contact your local Salter appointed agent.

DECLARATION OF CONFORMITY

Hereby, HoMedics Group Ltd, declares that this device is in compliance with the essential requirements and other relevant provisions of Directive 1999/5/EC. A copy of the Declaration of Conformity can be obtained from HoMedics Group Ltd.

Address: HoMedics Group Ltd, HoMedics House, Somerhill Business Park, Five Oak Green Road, Tonbridge, Kent, TN11 0GP, UK. **Email:** support@homedics.co.uk

ELECTROMAGNETIC COMPATIBILITY

This product is intended for domestic use.

ADVICE TO THE USER This is a sensitive electronic device and as such may be temporarily affected by Radio Transmitting Devices being used in close proximity to it (such as Mobile Phones etc.) or high levels of Electrostatic Interference. If this happens please remove and re-install the battery to re-establish normal working. If the problem persists then contact your local agent.

SALTER

HoMedics Group Ltd

HoMedics House, Somerhill Business Park
Five Oak Green Road, Tonbridge,
Kent TN11 0GP

www.salterhousewares.co.uk



IB-593-0816-01