

SALTER

SALTER COOK BLUETOOTH RECIPE SCALE

Instructions and Guarantee



Register your product today at
www.homedicsgroup.com/register

Transform your culinary experience with **SALTER COOK**.

Download the free **SALTER COOK** App and create your own personal cookbook, capturing recipes from your favourite websites at the click of a button as well as adding your own recipes by hand. Access your recipes anytime from your tablet and/or phone, whether you are at home or at the supermarket.

Connect the app to your **SALTER COOK** scale for a fully interactive weighing experience. See the weights from your recipes automatically linking to the scale display on the app. Make use of the clever built in timers, which you can name to remind you what they are for. Strike through ingredients as you move through your recipes so you never lose your place, scale up or down your recipe servings, create your own recipe categories, upload your photos, share with friends and much more!

Complete the experience with the **SALTER COOK** thermometer (sold separately) which will guide you through making the perfect roasts, jams, confectionary and more.

INSTRUCTIONS FOR USE


INSERT BATTERIES (3 x AAA): Ensure the +/- terminals are the correct way round

TO SWITCH ON: If using a bowl, place it on the scale. Press **0/zero**. Wait until the display shows **0**.

FOR CONNECTED USE: Make sure your phone or tablet has Bluetooth turned on. Open the **SALTER COOK** app (available free from App Store and Google Play) then press the  icon at the top of the screen. The app and scale will automatically connect.

Note: Your scale can only be connected to one device at a time and will automatically connect to the nearest device. Pressing the Bluetooth refresh icon will cause the scale to disconnect and reconnect to the nearest device.

TO SET A TARGET WEIGHT: Simply select any weight (underlined) from your **SALTER COOK** recipe. Or set the target manually on screen either by sliding the target marker or by touching the  icon.

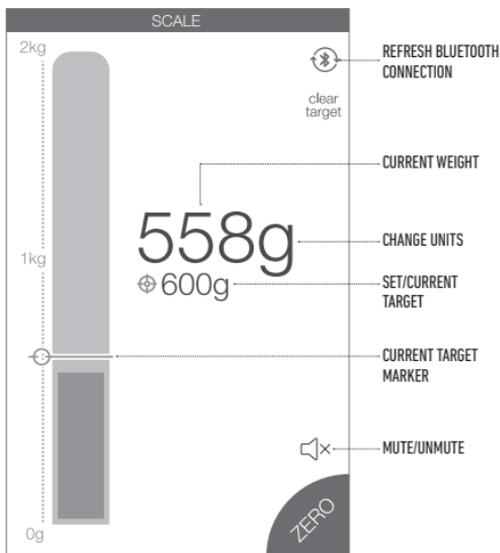

TO CONVERT WEIGHT UNITS: Press unit on the scale or tap the weight reading in the app to change between g, oz, ml and fl.oz. The ml and fl.oz measures are suitable for all water based liquids, eg. wine, stock, milk.

TO 'ADD & WEIGH' several ingredients in one bowl: Press /zero (on the scale or in the app) between each ingredient.

TO SWITCH OFF MANUALLY: Press /zero (on the scale) for 2-3 seconds. Auto switch off will occur after 1 minute if the scale shows 0 or after 3 minutes on the same weight reading. However, it will not occur if the scale is connected and the app is open.

WARNING INDICATORS:

Lo on the scale display = replace batteries

Err on the scale display = overload: remove some weight

CLEANING AND CARE: Clean the scale with a damp cloth only. Do not immerse in water or use chemical/abrasive cleaning agents.

 **WEEE EXPLANATION** This marking indicates that this product should not be disposed with other household wastes throughout the EU. To prevent possible harm to the environment or human health from uncontrolled waste disposal, recycle it responsibly to promote the sustainable reuse of material resources. To return your used device, please use the return and collection systems or contact the retailer where the product was purchased. They can take this product for environmental safe recycling.

 **BATTERY DIRECTIVE** This symbol indicates that batteries must not be disposed of in the domestic waste as they contain substances which can be damaging to the environment and health. Please dispose of batteries in designated collection points.

GUARANTEE This product is intended for domestic use only. Salter will repair or replace the product, or any part of this product, (excluding batteries) free of charge if within 15 years of the date of purchase, it can be shown to have failed through defective workmanship or materials. This guarantee covers working parts that affect the function of the product. It does not cover cosmetic deterioration caused by fair wear and tear or damage caused by accident or misuse. Salter shall not be responsible for any type of incidental, consequential or special damages. Opening or taking apart the product or its components will void the guarantee. Claims under guarantee must be supported by proof of purchase and be returned carriage paid to Salter (or local Salter appointed agent if outside the UK). Care should be taken in packing the product so that it is not damaged while in transit. This undertaking is in addition to a consumer's statutory rights and does not affect those rights in any way. For UK Sales and Service contact HoMedics Group Ltd, HoMedics House, Somerhill Business Park, Five Oak Green Road, Tonbridge, Kent TN11 0GP, UK. Helpline Tel No: (01732) 360783. Outside the UK contact your local Salter appointed agent.

DECLARATION OF CONFORMITY

Hereby, HoMedics Group Ltd, declares that this device is in compliance with the essential requirements and other relevant provisions of Directive 1999/5/EC. A copy of the Declaration of Conformity can be obtained from HoMedics Group Ltd

ELECTROMAGNETIC COMPATIBILITY

This product is intended for domestic use.

ADVICE TO THE USER This is a sensitive electronic device and as such may be temporarily affected by Radio Transmitting Devices being used in close proximity to it (such as Mobile Phones etc.) or high levels of Electrostatic Interference. If this happens please remove and re-install the battery to re-establish normal working. If the problem persists then contact your local agent.

SALTER

HoMedics Group Ltd

Homedics House, Somerhill Business Park
Five Oak Green Road, Tonbridge,
Kent TN11 0GP

www.salterhousewares.co.uk



IB-1193-0916-02